

Opening the ChemDisk II™



Tools You Will Need



Opening the Badge



You can use your fingernails to open the badge, but if you have to open a lot of them, you will wear out fast. We recommend you use a Spatula to wedge the badge open.


Twist the Cap Off



This is optional. However, with just a little twist, it gets the cap out of the way.

Note: Customers like the attached sampler cap on the ChemDisk II™. However, for dusty environments, we recommend twisting off the cap before sampling and putting it back on after sampling so dust does not accumulate in the cap.

Use the Pick to Pop the Sampling Face out.

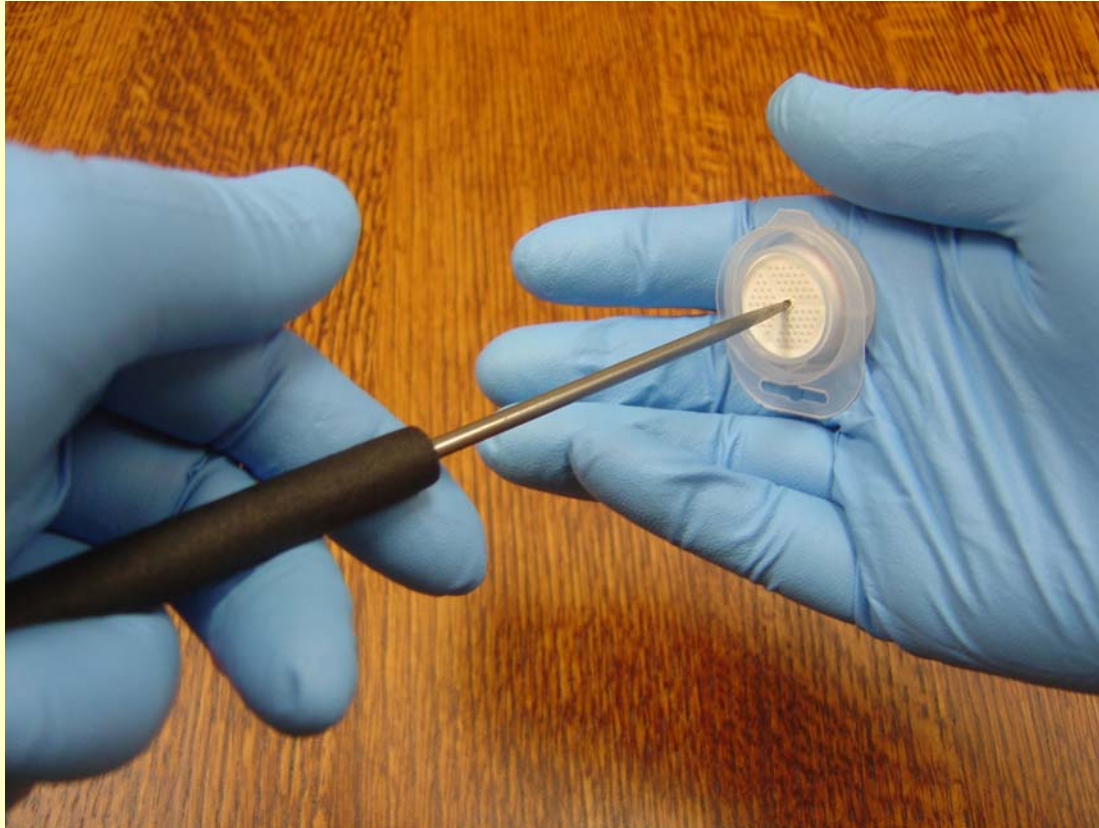

Jam the pick into the middle hole of the badge.

Note: We tried many different picks and this was the only one we found that was strong and narrow enough to do the job.

McMaster Part # 3842A42

Press Firmly and Wedge out the Face.



Our Chemists can pop these out in no time at all. This particular badge is a 571 aldehyde badge, but the procedure is the same for all the ChemDisk II™ badges.

